

AT-STRIP-01


AT-STRIP-01

Stripping Distance: 4, 6, 8, 10, 12 mm


For use with: RG 58, 59, 62, 6, 174, 316, WBC/LMR® 100, 195, 200, 240

6 = RG 6 LMR® 240
8 = RG 58 LMR® 195, 200
9 = RG 59, 62
D = RG 174, 316 LMR® 100


Replacement Blades: AT-STRIP-B1

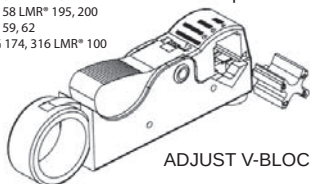

ADJUST V-BLOCK

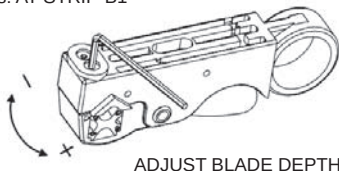


ADJUST BLADE DEPTH

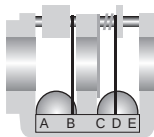

C + E = 4 mm
B + D = 6 mm (PRESET)
B + E = 8 mm
A + D = 10 mm
A + E = 12 mm

STRIPPING DISTANCE BLADE POSITIONS

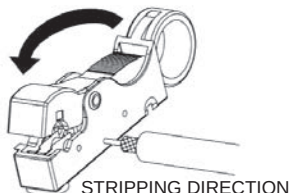

STRIPPING DIRECTION


AT-STRIP-02

AT-STRIP-02

Stripping Distance: 4, 6, 8, 10, 12 mm

For use with: RG 8, 11, 213, 214, WBC/LMR® 400


Replacement Blades: AT-STRIP-B2

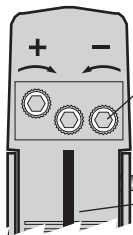

Adjust blade height with provided allen wrench.

Remove pin to adjust stripping distance.


Allen wrench

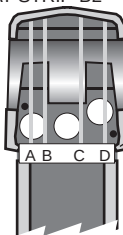

Remove pin to move blades.


Move blade positions to adjust stripping distance.

C + D = 4 mm
B + C = 6 mm
A + C = 8 mm
B + D = 10 mm
A + D = 12 mm

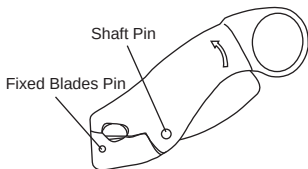

Shaft Pin

Fixed Blades Pin

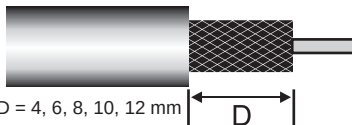

D = 4, 6, 8, 10, 12 mm

D

STRIPPING DISTANCE

Copyright © This drawing is property of L-com Global Connectivity. All rights reserved.